




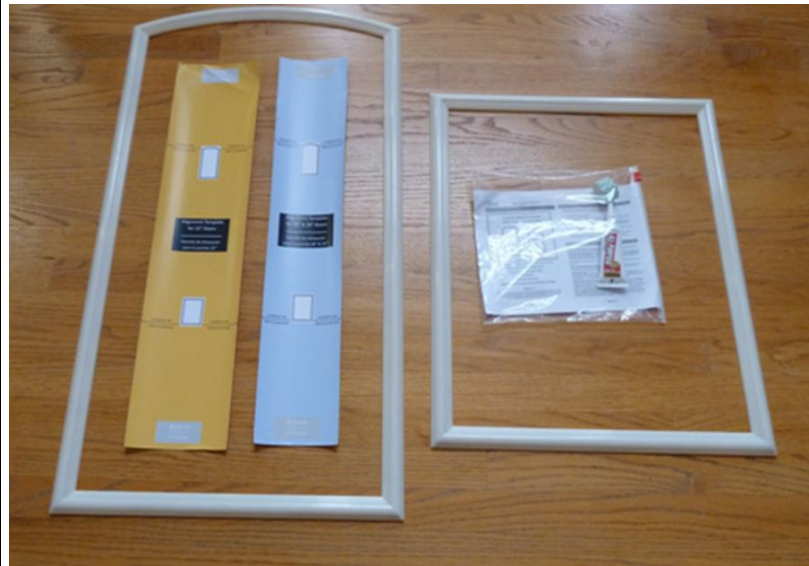


Step 1 – Verify box contents

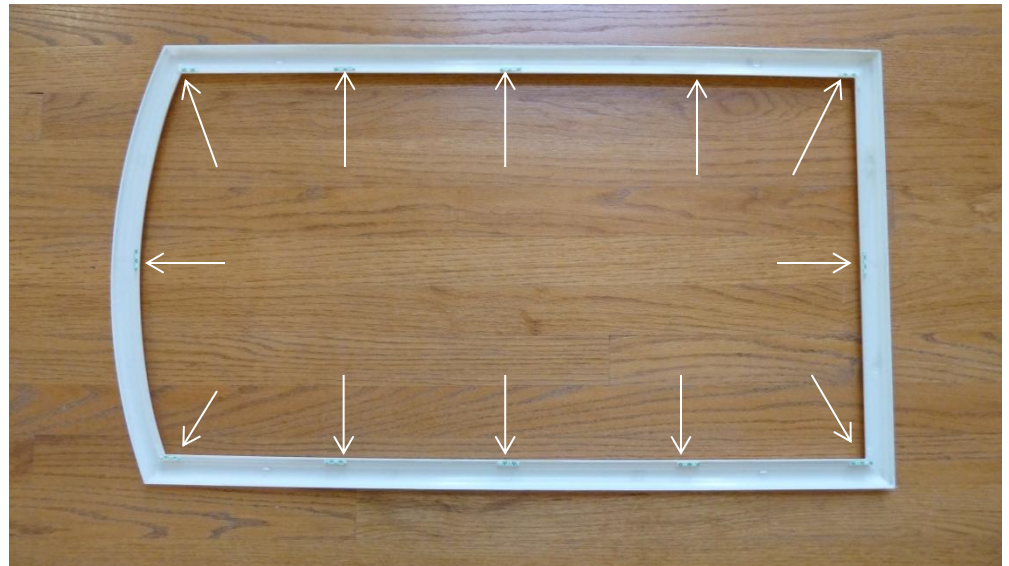

Step 2 – Attach 12 adhesive tabs to back of the upper frame

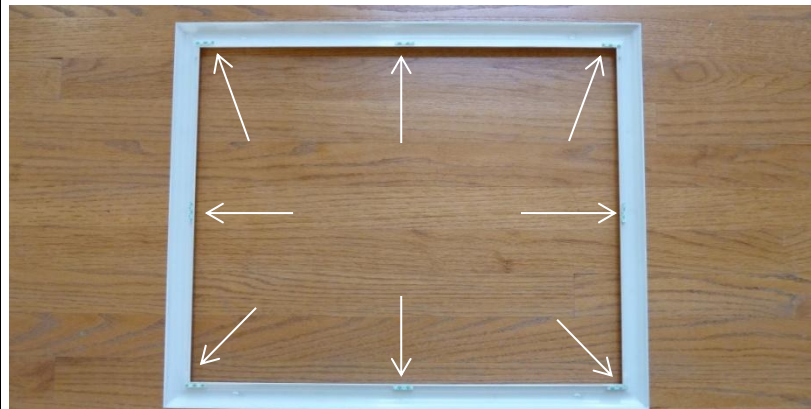


Step 2 – Attach 8 adhesive tabs to back of the lower frame

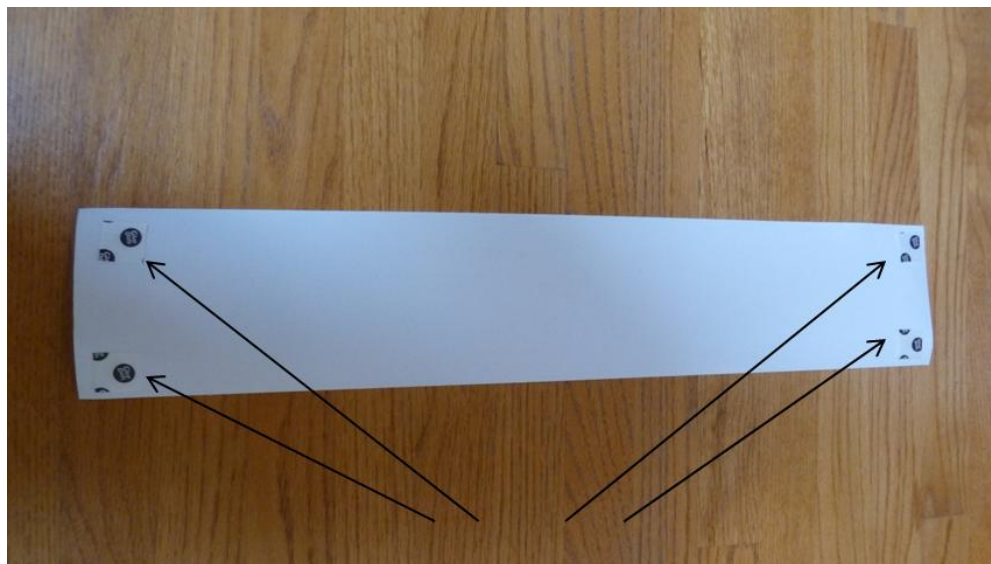

Step 3 – Attach glue dots to back of template



Step 4 – Align installation template on top of door

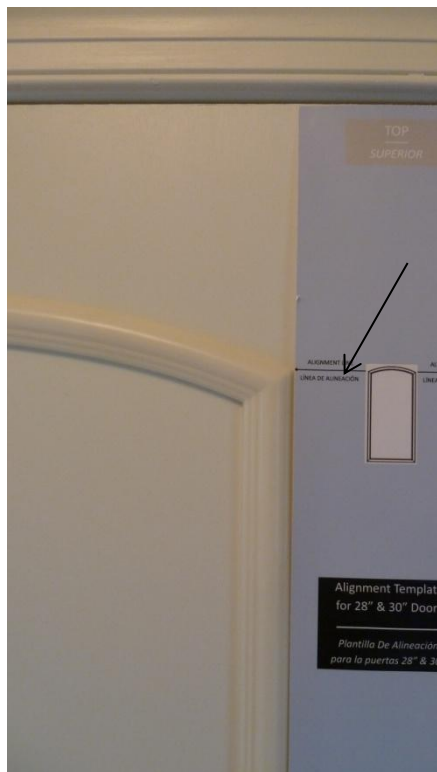

Step 5 – Align and place upper frame on door



Step 6 – Align installation template bottom of door



Step 7 – Align and place lower frame on door



Door with frames attached



Step 8 – Caulk inside and outside edges of frames