




Illustrated EZ-Door Installation Steps for 30" (Blue Template) or 32" (Gold Template) Wide Doors

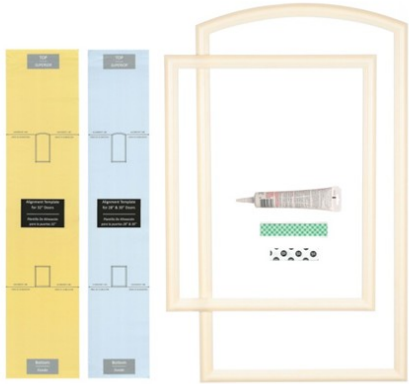


Step 1 – Verify Box Contents 30" & 32" Shown

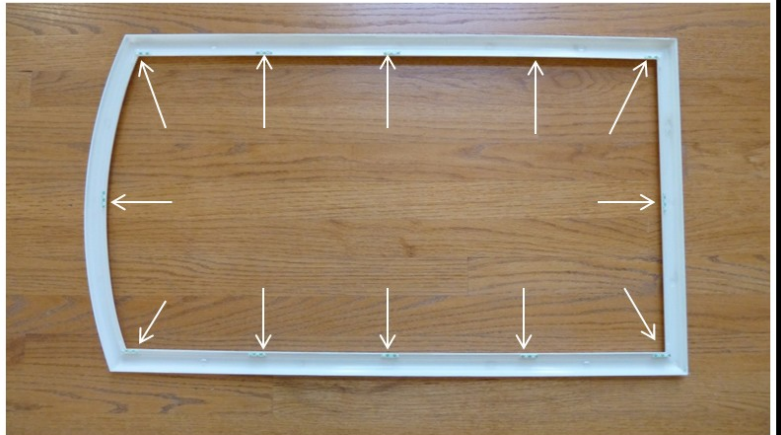

Step 2 – Attach 12 adhesive tabs to back of the upper frame

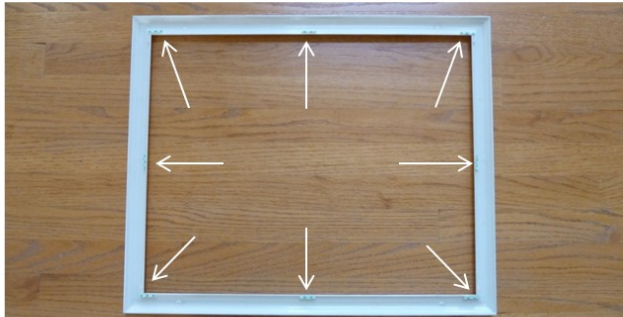

Step 2 – Attach 8 adhesive tabs to back of the lower frame

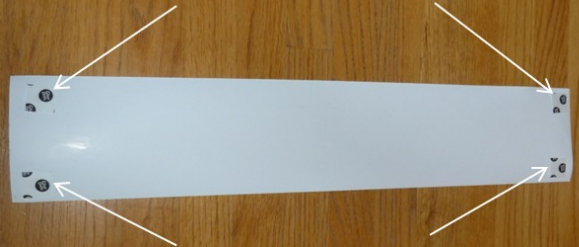


Step 3 – Attach 4 glue dots to back of template



Step 4 – Align installation template on top of door



Step 5 – Align and place upper frame on door

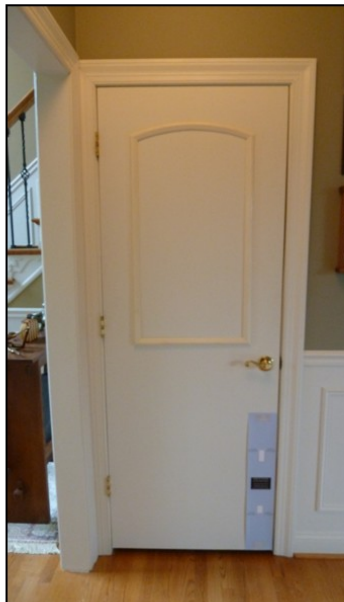

Step 6 – Align installation template bottom of door



Step 7 – Align and place lower frame on door



Step 8 – Caulk inside and outside edges of frames



Door with frames attached