




**Illustrated EZ-Door Installation Steps for 30" (Blue Template) or 32" (Gold Template) Wide Doors**

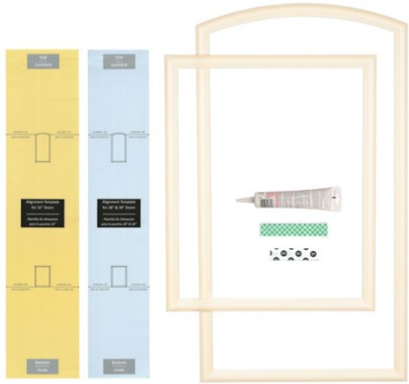


**Step 1 – Verify Box Contents 30" & 32" Shown**

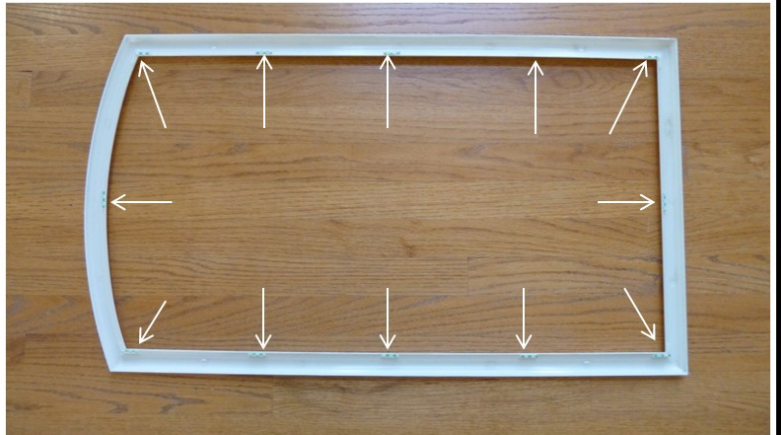

**Step 2 – Attach 12 adhesive tabs to back of the upper frame**

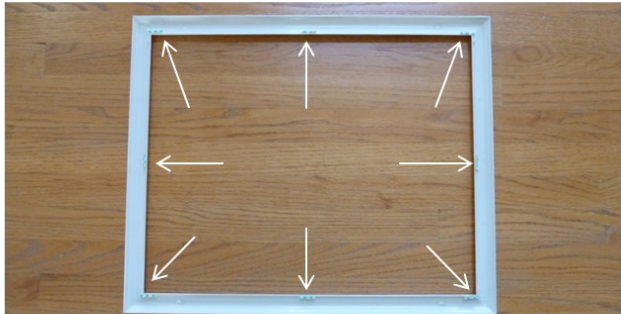

**Step 2 – Attach 8 adhesive tabs to back of the lower frame**

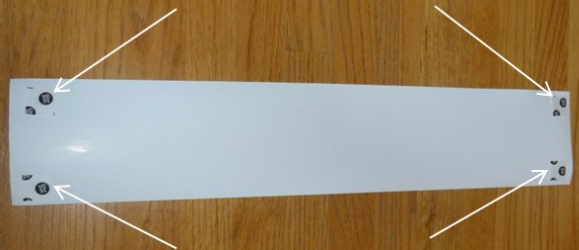

**Step 3 – Attach 4 glue dots to back of template**



**Step 4 – Align installation template on top of door**



**Step 5 – Align and place upper frame on door**



**Step 6 – Align installation template bottom of door**



**Step 7 – Align and place lower frame on door**



**Step 8 – Caulk inside and outside edges of frames**



**Door with frames attached**